SHARP

AN-37AG2

液晶カラーテレビ用壁掛け金具

LCD Color TV Wall-Mount Bracket

Téléviseur couleur LCD et le support de montage au mur

Wandhalter für LCD-Farbfernsehgerät

Ménsula de montaje el TV color de cristal líquido en la pared

液晶彩色电视机用墙壁挂件

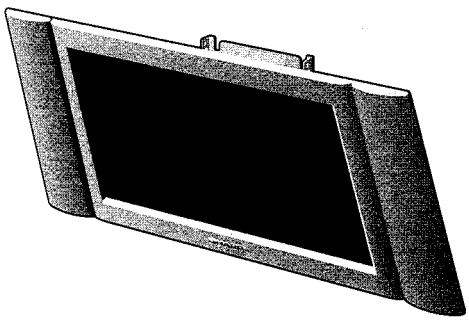

取扱説明書

OPERATION MANUAL

MODE D'EMPLOI

BEDIENUNGSANLEITUNG

MANUAL DE MANEJO

使用说明书

日本語	ENGLISH	FRANÇAIS	DEUTSCH	ESPAÑOL	中文（简）	適応機種/Used Models/Modèle utilisé/ Gebrauchtes Modell/Modelo usado/适应型号
日本向け	For Japan	Pour le Japon	Für Japan	Para Japón	销往日本	LC-30AD1 • LC-30AD2 LC-30BV3 • LC-30BV5 LC-30HV3 • LC-32GD1 LC-32GD2 • LC-32GD3 LC-32GD4 • LC-37AD1 LC-37AD2 • LC-37BD5 LC-37GD1 • LC-37GD2 LC-37GD3 • LC-37GD4 LC-37U5-B/-R • LC-37L5-B/-T LC-37W5C/K • LC-45GD1
欧州向け	For Europe	Pour l'Europe	Für Europa	Para Europa	销往欧洲	LC-30AD1E • LC-30HV2E LC-30HV4E • LC-37AD1E LC-37HV4E
米国・台湾向け	For U.S.A. and Taiwan	Pour les Etats-Unis et Taïwan	Für USA und Taiwan	Para los EE.UU. y Taiwan	销往美国、台湾	LC-30HV2U • LC-30HV4U LC-30HV6U • LC-37HV4U LC-37HV6U • LC-37G4U LC-32G4U • LC-32GD4 LC-32GD6 • LC-37GD4 LC-37GD6 • LC-45GX6
アジア・豪州向け	For Asia regions and Australia	Pour les pays asiatiques et l'Australie	Für asiatische Regionen und Australien	Para las regiones de Asia y Austalia	销往亚洲、澳大利亚	LC-30HV2M • LC-30HV4N LC-30AA1M • LC-37HV4M LC-37AA1M
香港向け	For Hong Kong	Pour Hong Kong	Für Hongkong	Para Hong Kong	销往香港	LC-30HV2H • LC-30HV4H LC-30AA1H • LC-37HV4H LC-37AA1H
韓国向け	For Korea	Pour la Corée	Für Korea	Para Corea	销往韩国	LC-30HV2D • LC-30HV4D LC-37HV4D

日本語 ENGLISH FRANÇAIS DEUTSCH ESPAÑOL 中文（简）

• Thank you for purchasing a SHARP product.

Before using the product, please be sure to read this operation manual carefully. In particular, be sure to read the section "To Ensure Safe and Correct Use." After reading the manual, keep it in a convenient location where it can be accessed at any time.

To Ensure Safe and Correct Use

ENGLISH

This operation manual and the product use various displays and labels to ensure safe use. Ignoring these displays and labels and incorrectly using the product could have results as classified below. Please read the following warning symbol information before reading the rest of this section, and be sure to strictly observe all instructions.

⚠ **Warning:** Not following these instructions could result in death or serious injury.

⚠ **Caution:** Not following these instructions could result in injury or property damage.

Meaning of symbol The symbol ⃠ means something that should not be done.

Special Precautions for Safety

⚠ Warning

- Follow the instructions in this manual regarding the installation method and installation orientation. Not following these instructions could results in injury or damage from falling parts.
- Accurate work is required for the installation work, so please have it done by the dealer or qualified contractor.
- During installation, be careful not to pinch your fingers in the fixture, etc.
- Make sure the installation wall is sufficiently strong to support the weight of the TV. (Attach the fixtures to the reinforcing material in the walls.)
- Do not apply any other loads to the installation fixtures. Doing so could cause the TV to fall causing injury and damage.
- Do not modify or change the installation parts. Doing so could cause the TV to fall causing injury and damage.

⚠ Caution

Install in a location with low humidity and little dust

- Do not install the LCD color TV in a location with high humidity and much dust. Doing so could result in fire or electric shock.
- Do not place the LCD color TV where it will come into contact with oily smoke or steam, such as near a cooking range or humidifier. Doing so could result in fire or electric shock.

Install in a well-ventilated area

- Do not plug the air passage holes in the LCD color TV cabinet. Plugging the air passage holes could trap heat inside the cabinet, causing a fire.
- Do not use the cabinet as follows. Do not place the cabinet in a place with poor air circulation, such as in a closet or bookcase. Do not place a drop cloth, etc., on the installed LCD color TV.

Please strictly observe the following.

Special skill is required to install the LCD color TV, so please have it installed by a contractor specializing in such installation. The customer should not attempt to install the TV. Sharp shall not be responsible for improper installation or any accidents, damage, or injury resulting from improper installation.

To the contractor

- To ensure the safety of the customer, conduct the design so that the strength of the installation location is sufficiently strong to support the weight of the LCD color TV and the wall-mount bracket.
- Be sure to use two or more people to conduct the work.
- The wall installation screws for the wall-mount brackets are not included with the fixtures. Select off-the-shelf screws that match the wall.

Outside dimension drawing

Based bracket

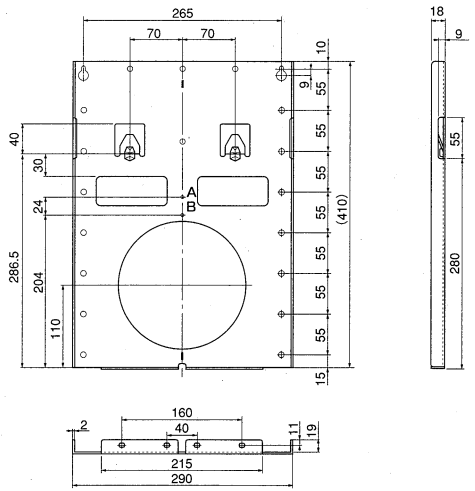

Wall-mount bracket

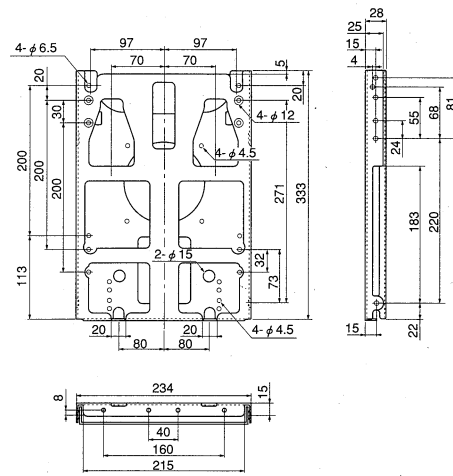

Unit: mm

Accessories packaged with the TV

Based bracket: 1

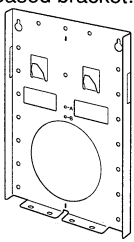

Wall-mount bracket: 1

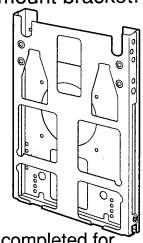

* Assembly completed for perpendicular installation.

Screws

For Model 30

Attachment bracket (51mm thick): 1 (BV)



Attachment bracket (41mm thick): 1 (HV)



Angle setup bracket: 2



Operation manual (This manual)



For fastening the wall-mount bracket	For the angle setup bracket	For attachment installation	For TV installation Ⓐ or Ⓑ
M5 length: 8mm (2 screws)	M6 length: 15mm (2 screws)	M4 length: 12mm (4 screws)	Ⓐ M6 length: 30mm (4 screws) / Ⓑ M6 length: 12mm (4 screws)

*The screw notation M5 means that the diameter of the threads is 5mm.
*Please also store the screws that are not used.

ENGLISH

Please use the following

- Wall installation screws (off-the-shelf screws) 16 to 20
  Be sure to consult the dealership or a qualified contractor when installing the TV.
- A plumb bob of hole making hardness (coin), etc., with a string attached.
- A pin, such as a thumbtack • Cushion, soft cloth, etc. • Tool (Phillips head screwdriver)

Installation location

- LCD color TVs have a viewing angle (range in which the image can be viewed correctly). The best viewing position is from directly in front of the screen. Determine the TV installation location after taking into consideration the viewing posture, line of sight, and the visual and aural ranges.

Caution

- Sharp shall bear no responsibility for damages, etc., caused by the LCD color TV falling due to insufficient installation strength or improper installation.

Weight table (Unit: kg)

Destination market	Appropriate Model	Model unit (no stand)	Fixture	Total Weight
Japan	LC-30AD1	Approx. 17.6	Approx. 3.2	Approx. 20.8
	LC-30AD2	Approx. 18.0	Approx. 3.2	Approx. 21.2
	LC-30BV3	Approx. 17.9	Approx. 3.2	Approx. 21.1
	LC-30BV5	Approx. 17.5	Approx. 3.2	Approx. 20.7
	LC-30HV3	Approx. 16.9	Approx. 3.2	Approx. 20.1
	LC-32GD1	Approx. 16.5	Approx. 3.2	Approx. 19.7
	LC-32GD2	Approx. 17.5	Approx. 3.2	Approx. 20.7
	LC-32GD3	Approx. 20.2	Approx. 3.2	Approx. 23.4
	LC-32GD4	Approx. 21.0	Approx. 3.2	Approx. 24.2
	LC-37AD1	Approx. 20.0	Approx. 3.2	Approx. 23.2
	LC-37AD2	Approx. 20.0	Approx. 3.2	Approx. 23.2
	LC-37BD5	Approx. 20.0	Approx. 3.2	Approx. 23.2
	LC-37GD1	Approx. 18.5	Approx. 3.2	Approx. 21.7
	LC-37GD2	Approx. 19.5	Approx. 3.2	Approx. 22.7
	LC-37GD3	Approx. 22.2	Approx. 3.2	Approx. 25.4
	LC-37GD4	Approx. 23.2	Approx. 3.2	Approx. 26.4
	LC-37U5-B/-R	Approx. 24.8	Approx. 3.2	Approx. 28.0
	LC-37L5-B/-T	Approx. 23.6	Approx. 3.2	Approx. 26.8
	LC-37W5C/K	Approx. 25.2	Approx. 3.2	Approx. 28.4
	LC-45GD1	Approx. 26.0	Approx. 3.2	Approx. 29.2

Destination market	Appropriate Model	Model unit (no stand)	Fixture	Total Weight
Others	LC-30HV2	Approx. 15.2	Approx. 3.2	Approx. 18.4
	LC-30HV4	Approx. 15.7	Approx. 3.2	Approx. 18.9
	LC-37HV4	Approx. 20.0	Approx. 3.2	Approx. 23.2
	LC-30HV6	Approx. 16.1	Approx. 3.2	Approx. 19.3
	LC-30AA1	Approx. 16.1	Approx. 3.2	Approx. 19.3
	LC-30AD1	Approx. 16.1	Approx. 3.2	Approx. 19.3
	LC-37HV6	Approx. 20.4	Approx. 3.2	Approx. 23.6
	LC-37AA1	Approx. 20.4	Approx. 3.2	Approx. 23.6
	LC-37AD1	Approx. 20.4	Approx. 3.2	Approx. 23.6
	LC-37G4	Approx. 19.5	Approx. 3.2	Approx. 22.7
	LC-32G4	Approx. 17.5	Approx. 3.2	Approx. 20.7
	LC-32GD4	Approx. 20.9	Approx. 3.2	Approx. 24.1
	LC-32GD6	Approx. 20.2	Approx. 3.2	Approx. 23.4
	LC-37GD4	Approx. 23.4	Approx. 3.2	Approx. 26.6
	LC-37GD6	Approx. 22.3	Approx. 3.2	Approx. 25.5
	LC-45GX6	Approx. 26.0	Approx. 3.2	Approx. 29.2

Using the Wall Mount Bracket (Option)

The wall mount bracket is specially designed for displays 30" and larger.

Note

- Consult with your dealer and leave the installation up to a specialized person at Sharp dealer or authorized service shop.
- Make sure that the wall or place where the display is mounted should be made of plywood of 5/6" (15mm) or over in thickness, otherwise the wall would be necessary a reinforcement work for the safety.
- The screws to fix the based bracket on the wall are not included in the product and in the optional bracket. Use the commercially available screws, however, make sure the dimensions shown as follows. (14 to18 pieces)

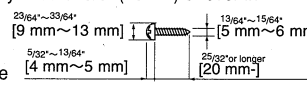

Wall-Mount Bracket Installation

1 Determine the location where the based bracket will be installed.

Take the coin with the string and align it perpendicular to the based bracket.

Use a pencil, etc., to mark the two screw hole locations.

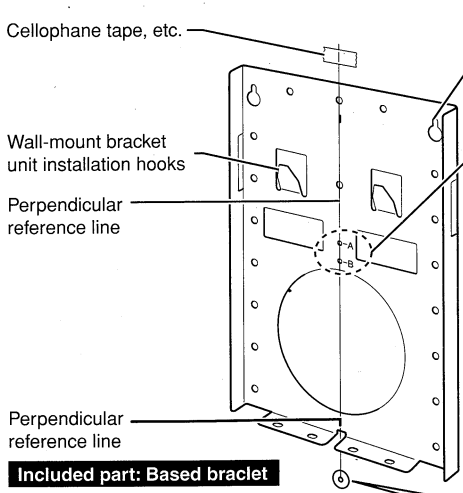

shaped screw holes
Use a pencil, etc., to mark the screw hole position on the wall behind the bracket.

Display screen center position
Use this as a reference for the display height position.

Marking A	LC-37BD5, LC-37HV4 LC-37AD1, LC-37AD2 LC-37HV6, LC-37AA1 LC-37GD1, LC-37GD2 LC-32GD1, LC-32GD2 LC-37G4, LC-32G4 LC-37U5-B/-R, LC-37L5-B/-T LC-37W5C/K, LC-45GD1 LC-37GD4, LC-32GD4 LC-37GD3, LC-32GD3 LC-45GX6, LC-37GD6 LC-32GD6
Marking B	LC-30BV5, LC-30BV3 LC-30HV3, LC-30HV2/4 LC-30AD1, LC-30AD2 LC-30HV6, LC-30AA1

Align horizontally and vertically until the string lies on top of the vertical reference line.

2 Loosely screw in the screws.

Temporarily remove the based bracket from the wall and loosely screw in 2 off-the-shelf screws in the screw hole positions marked on the wall. At this time, the screw heads should extend several mm above the wall so that the based bracket can be hung on the screw heads. Hang the based bracket on the installed screws, check to make sure the bracket is not sagging to the left or right, and then firmly tighten the screws. Use off-the-shelf screws to secure the remaining screw holes (14 to 18 screws).

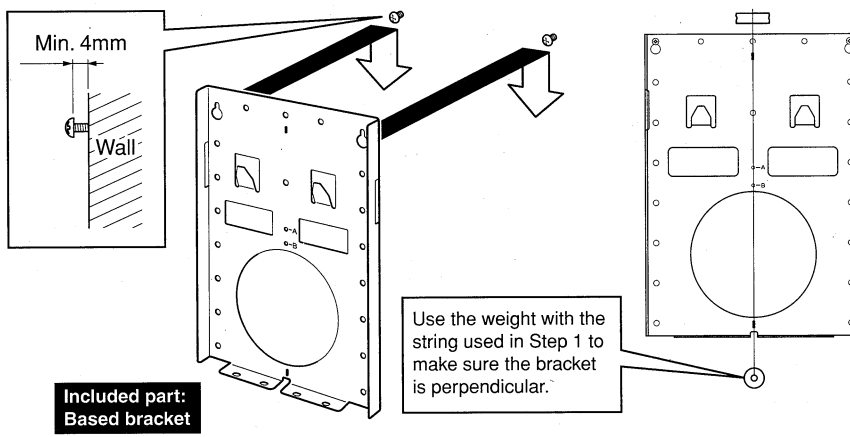
Min. 4mm
Wall
Use the weight with the string used in Step 1 to make sure the bracket is perpendicular.
Included part: Based bracket

Set the angle of the wall-mount bracket

The wall-mount bracket is assembled for perpendicular installation, so to use it for tilted installation, please follow the procedure below to set it at the installation angle.

Caution

- When setting the angle of the wall-mount bracket, be careful not to pinch your fingers, etc.
- There is a limit to the angle that can be set depending on the model.

*(1) Models for which the destination market is Japan.
*(2) Models for which the destination market is other than Japan.

Setting Angle Chart

Model Name	Setting Angle
LC-37BD5, LC-37HV4, LC-37AD2, LC-30BV5, LC-30BV3, LC-30HV3, LC-30HV2, LC-30HV4, LC-30AD2, LC-37U5-B/-R, LC-37L5-B/-T, LC-37W5C/K, LC-32GD4	0°, 5°, 10° 15°, 20°
LC-32GD2, LC-32G4	0°, 5°, 10°, 15°
LC-30AD1*(1), LC-37GD4, LC-32GD3, LC-32GD6	0°, 5°, 10°
LC-30HV6, LC-30AA1, LC-30AD1*(2), LC-37AD1, LC-37HV6, LC-37AA1, LC-37GD2, LC-37G4, LC-37GD3, LC-37GD6	0°, 5°
LC-37GD1, LC-32GD1, LC-45GD1, LC-45GX6	0°

Setting the installation angle.

1 Remove the 2 vertical installation screws. These screws are used when setting the angle.

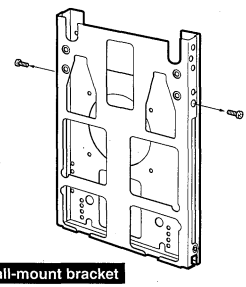

Included part: Wall-mount bracket

2 Assemble the wall-mount bracket as desired as shown in the figure. (Figure shows a 20° angle.) Use the screws removed in Step 1 (M6 length: 15mm x 2 screws) and the included screws M6 length: 15mm x 2 screws to loosely fasten the angle-setup bracket with 4 screws. Firmly tighten these 4 screws after the angle-setup bracket position has been determined.

Included part: Screws M6 15mm length (2 screws)

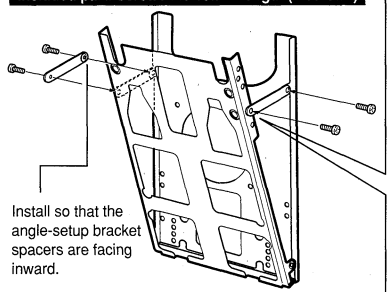

Included part: Wall-mount bracket

As the screw hole numbers become larger (5, 10, 15, 20), the LCD color TV will be tipped farther forward. There is a limit to the angle that can be set depending on the model.

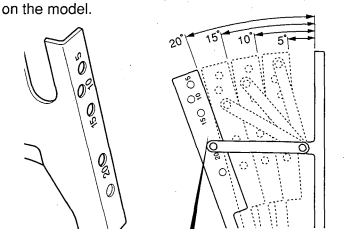

Included part: Angle setup bracket (2 units)

ENGLISH

Installing the wall-mount bracket (For Model 45 inch Separate Type)

Use the following procedures to install the Model 45 inch LCD color TV (LC-45GD1, LC-45GX6).

Caution

- When installing the wall-mount bracket to the LCD color TV, place the LCD color TV face down on a soft cloth or cushion.
- The stand can be removed while the LCD color TV standing upright, but Model 45 inch is quite large, so for safety's sake, the explanation of how to remove the stand is given with the LCD color TV laying down.

1 Remove the terminal covers on the back of the LCD color TV.

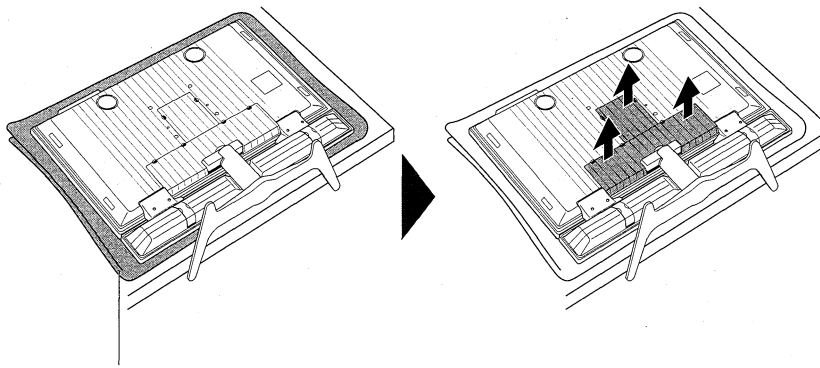

Soft cloth or cushion.

2 Remove the table stand.

Remove the screws (4 screws) fastening the table stand, and then remove the table stand. (Remove after pulling in the direction shown by the arrow.)
Save the removed stand fastening screws (4 screws).

Stand fastening screws (4 screws)

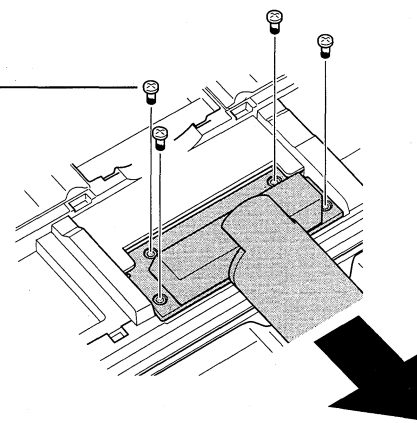

3 **Perform the cable work.**

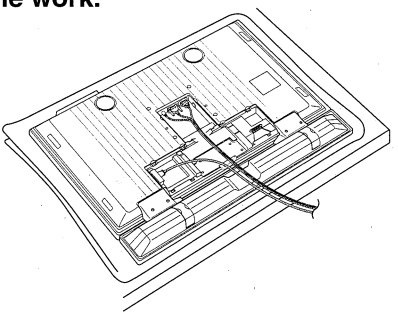

4 **Install the back terminal cover.**

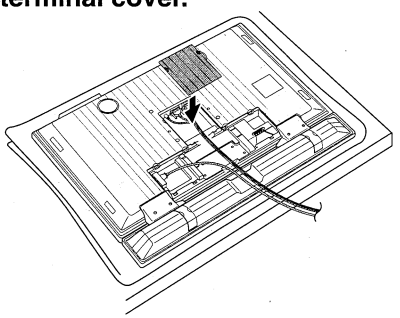

5

Install the wall-mount bracket.

Install the wall-mount bracket (with the angle set) to the back of the LCD color TV.

1 Align the wall-mount bracket screw holes (Marked A: 4 locations) to the LCD color TV back holes.

2 Use the included M6 30mm length screws for TV installation Ⓐ (4 screws) to securely fasten the wall-mount bracket.

* When there are caps in the 4 holes on the back of the LCD color TV, remove these ahead of time.

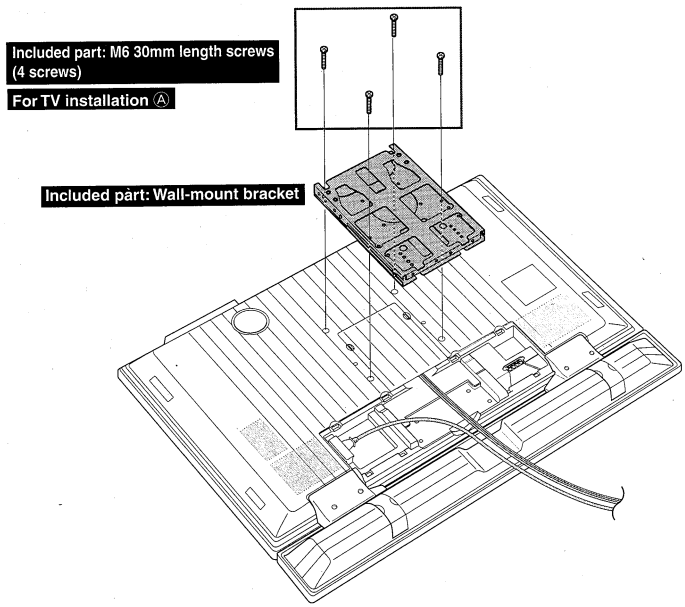

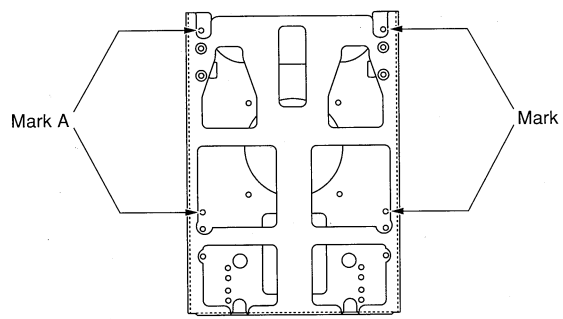

Installing the wall-mount bracket (For Model 37 inch Separate Type)

Use the following procedures to install the Model 37 inch LCD color TV (LC-37AD1, LC-37AD2, LC-37BD5, LC-37HV4, LC-37HV6, LC-37AA1, LC-37GD1, LC-37GD2, LC-37G4, LC-37U5-B/-R, LC-37L5-B/-T, LC-37W5C/K).

Caution

- Be sure to use two people to perform the wall-mount bracket installation work for the Model 37 inch LCD color TV.
- The installation work must be conducted while the Model 37 inch LCD color TV is standing upright, so be careful that it does not fall over.

1

Remove the back terminal covers from the LCD color TV.

Remove the terminal covers while the LCD color TV is standing upright.

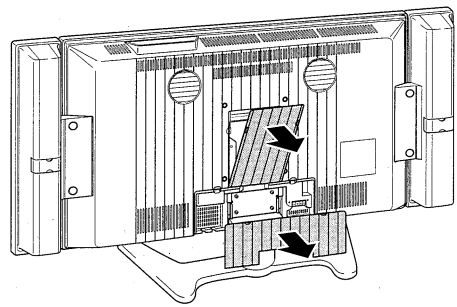

2

Wire in the cables.

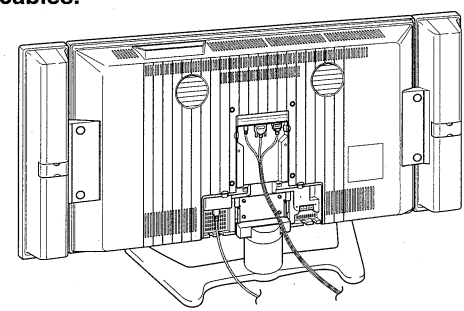

3

Install the top terminal cover.

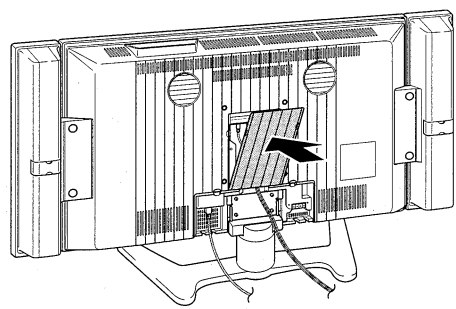

4

Install the wall-mount bracket.

Install the wall-mount bracket (with the angle set) to the back of the LCD color TV.

1 Align the wall-mount bracket screw holes (Marked A: 4 locations) to the LCD color TV back holes.

2 Use the included M6 30mm length screws for TV installation Ⓐ (4 screws) to securely fasten the wall-mount bracket.

* When there are caps in the 4 holes on the back of the LCD color TV, remove these ahead of time.

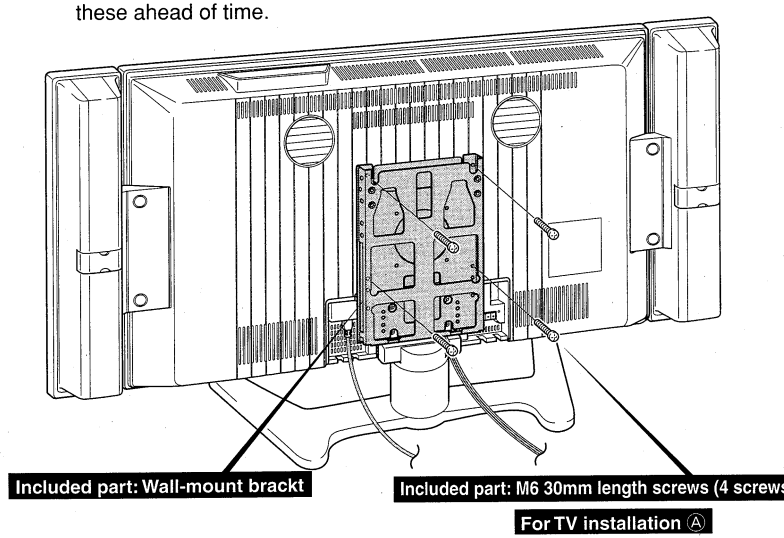

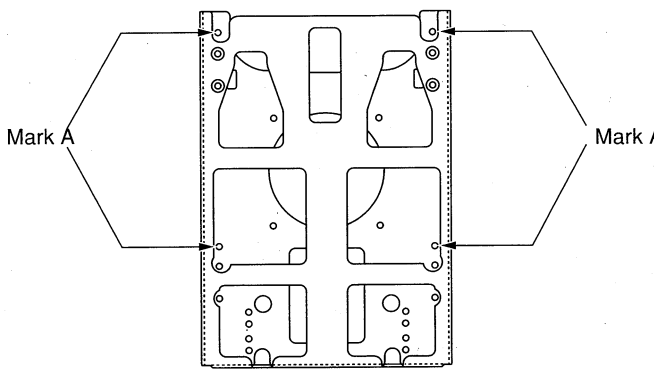

5

Remove the table stand.

1 Remove the stand fastening screws from the 4 locations in the wall-mount bracket.

2 Have two people lift the LCD color TV off of the table stand.
Save the removed stand fastening screws (4 screws).

1

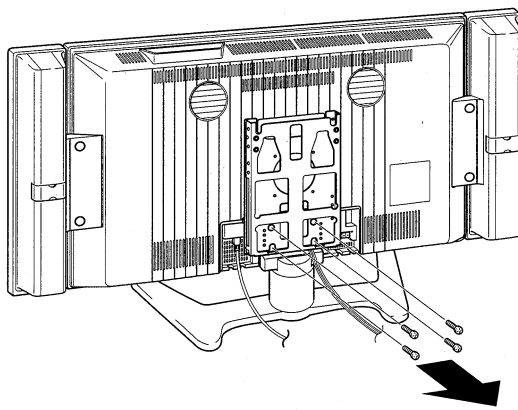

Included part: Wall-mount bracket

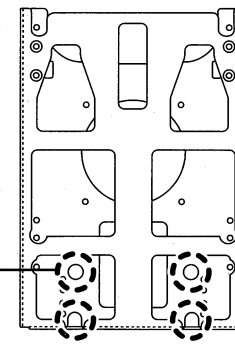

Use the screwdriver to remove the 4 stand fastening screws from these holes.

2

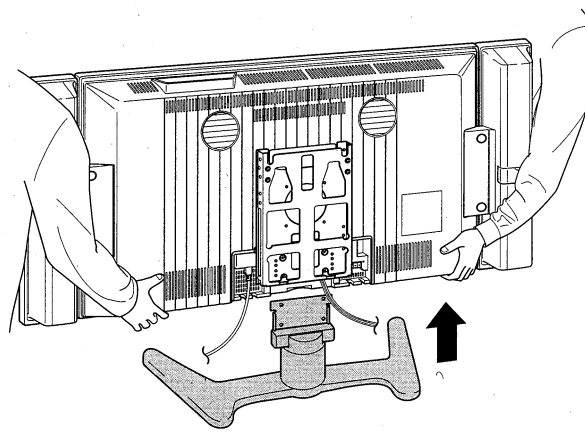

Installing the wall-mount bracket (For Model 37 inch Integrated Type)

Use the following procedures to install the Model 37 inch LCD color TV (LC-37GD3, LC-37GD4, LC-37GD6).

Caution

- Be sure to use two people to perform the wall-mount bracket installation work for the Model 37 inch LCD color TV.
- The installation work must be conducted while the Model 37 inch LCD color TV is standing upright, so be careful that it does not fall over.

1

Remove the back terminal covers from the LCD color TV.

Remove the terminal covers while the LCD color TV is standing upright.

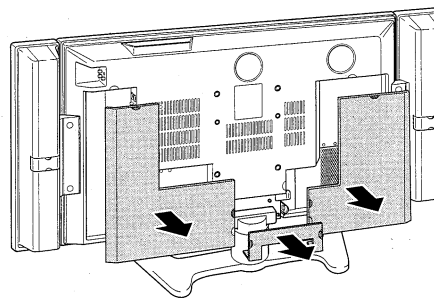

2

Perform the cable work.

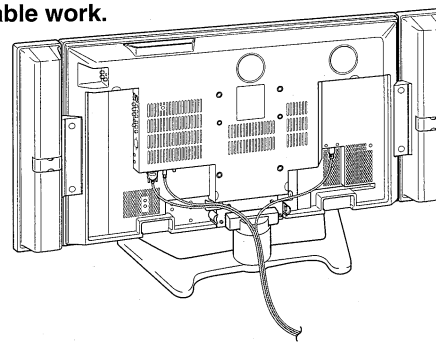

3

Install the side terminal covers.

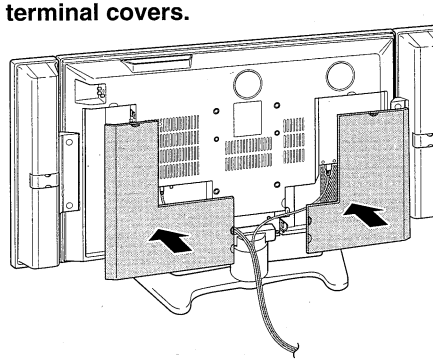

4

Install the wall-mount bracket.

Install the wall-mount bracket (with the angle set) to the back of the LCD color TV.

1 Align the wall-mount bracket screw holes (Marked I: 4 locations) to the LCD color TV back holes.

2 Use the included M6 12mm length screws for TV installation Ⓑ (4 screws) to securely fasten the wall-mount bracket.

* When there are caps in the 4 holes on the back of the LCD color TV, remove these ahead of time.

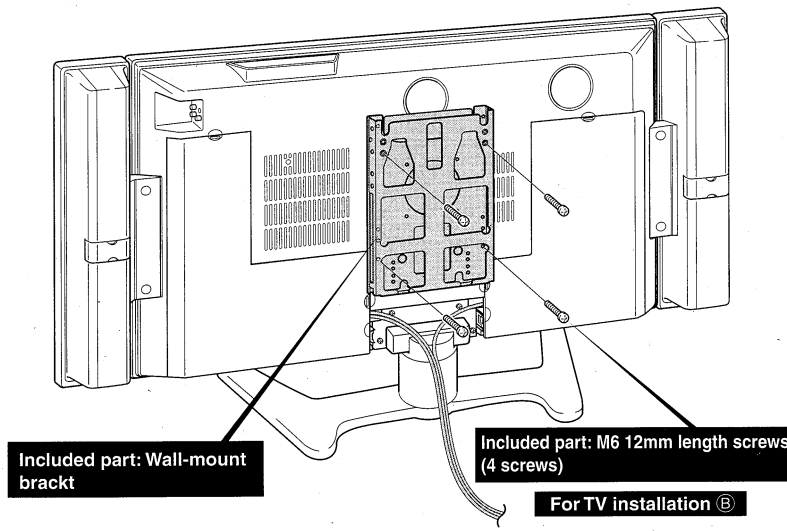

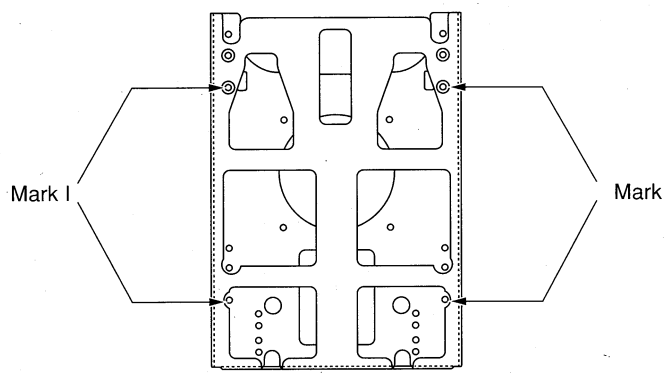

5

Remove the table stand.

Remove the screws (4 screws) fastening the table stand, and then have two people lift the LCD color TV off of the table stand.

Save the removed stand fastening screws (4 screws).

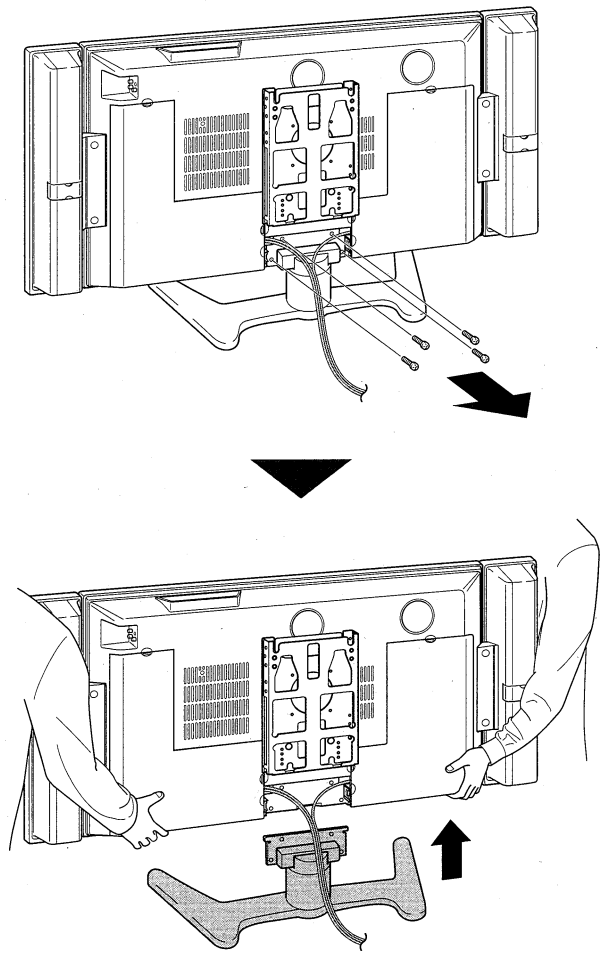

Installing the wall-mount bracket (For Model 32 inch Separate Type)

Use the following procedures to install the Model 32 inch LCD color TV (LC-32GD1, LC-32GD2, LC-32G4). The explanation is given using LC-32GD2 as an example, but the installation procedure is also the same for LC-32GD1, LC-32G4.

Caution

- When installing the wall-mount bracket to the LCD color TV, place the LCD color TV face down on a soft cloth or cushion.

1 Remove the terminal covers on the back of the LCD color TV.

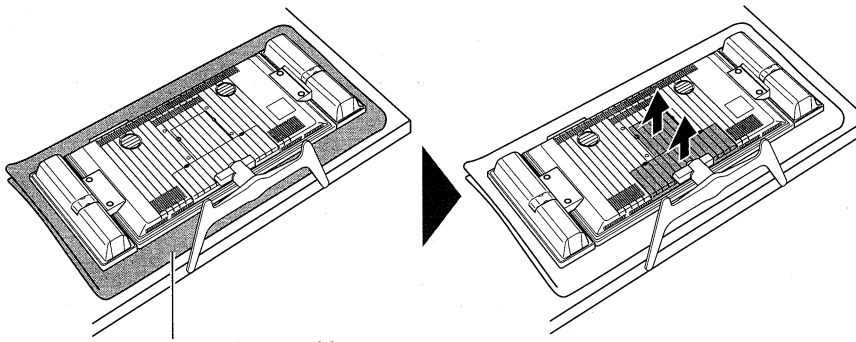

2 Remove the table stand.

Remove the screws (4 screws) fastening the table stand, and then remove the table stand. (Remove after pulling in the direction shown by the arrow.)
Save the removed stand fastening screws (4 screws).

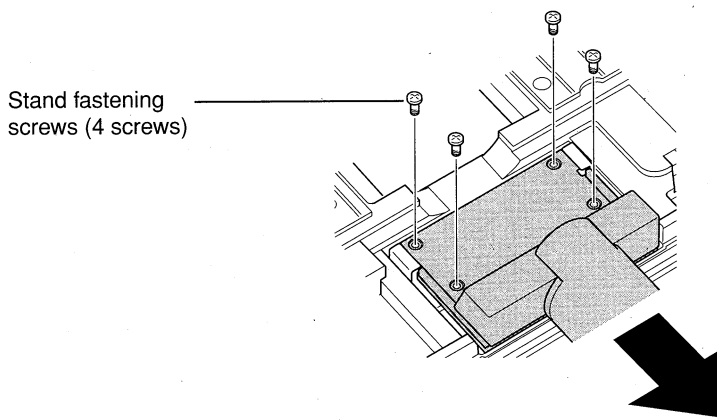

3 **Perform the cable work.**

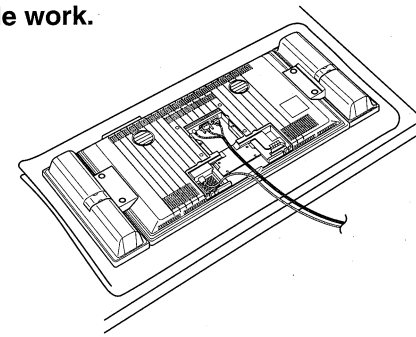

4 **Install the back terminal cover.**

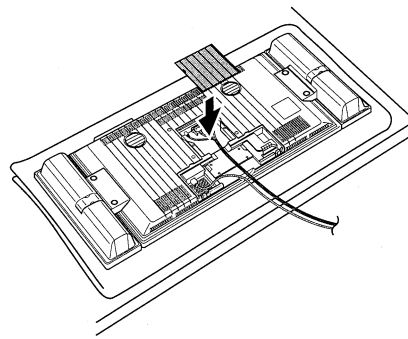

5

Install the wall-mount bracket.

Install the wall-mount bracket (with the angle set) to the back of the LCD color TV.

1 Align the wall-mount bracket screw holes (Marked A: 4 locations) to the LCD color TV back holes.

2 Use the included M6 30mm length screws for TV installation Ⓐ (4 screws) to securely fasten the wall-mount bracket.

* When there are caps in the 4 holes on the back of the LCD color TV, remove these ahead of time.

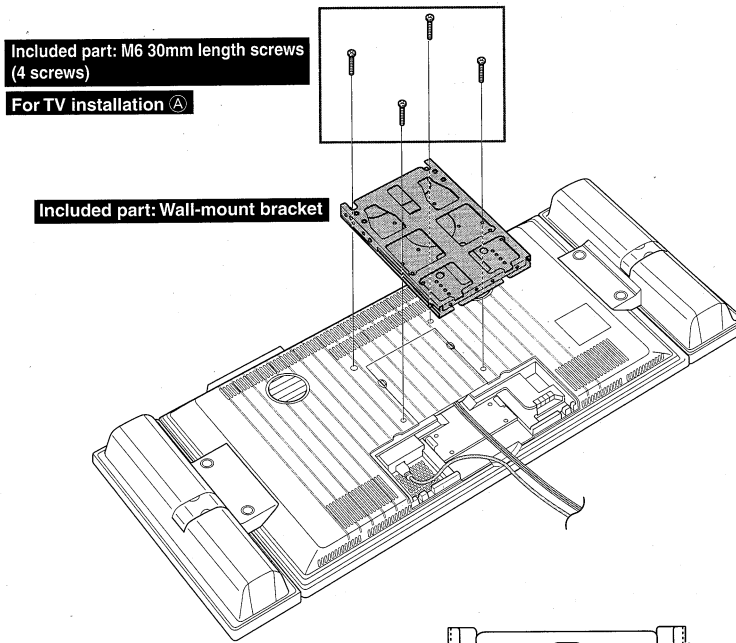

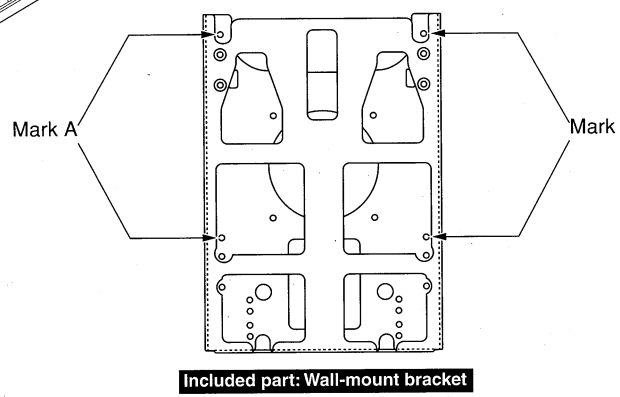

Installing the wall-mount bracket (For Model 32 inch Integrated Type)

Use the following procedures to install the Model 32 inch LCD color TV (LC-32GD3, LC-32GD4, LC-32GD6).

Caution

- When installing the wall-mount bracket to the LCD color TV, place the LCD color TV face down on a soft cloth or cushion.

1 Remove the terminal covers on the back of the LCD color TV.

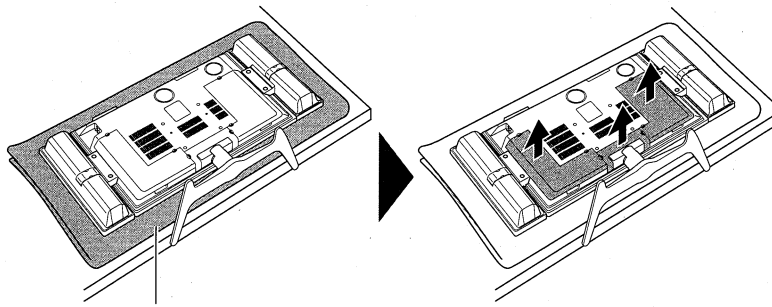

2 Remove the table stand.

Remove the screws (4 screws) fastening the table stand, and then remove the table stand. (Remove after pulling in the direction shown by the arrow.)
Save the removed stand fastening screws (4 screws).

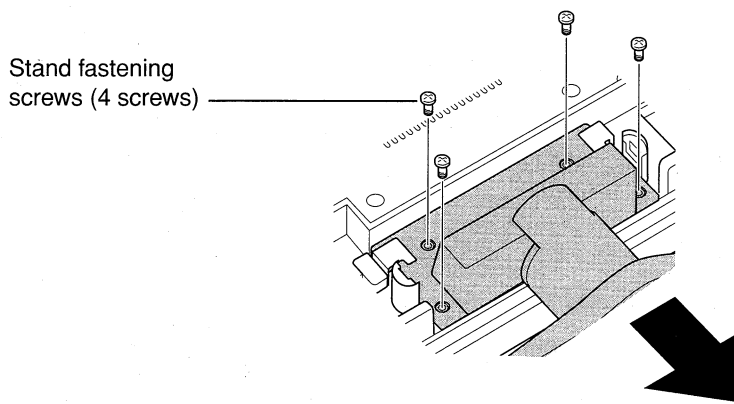

3 **Perform the cable work.**

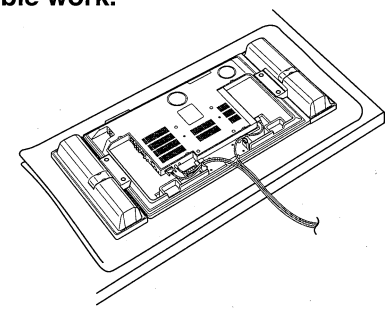

4 **Install the side terminal covers.**

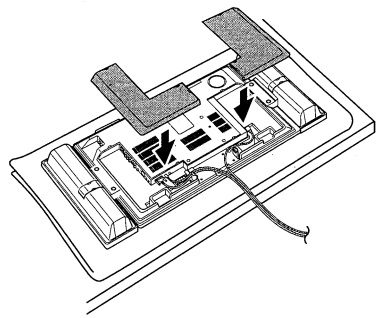

5

Install the wall-mount bracket.

Install the wall-mount bracket (with the angle set) to the back of the LCD color TV.

1 Align the wall-mount bracket screw holes (Marked I: 4 locations) to the LCD color TV back holes.

2 Use the included M6 12mm length screws for TV installation Ⓑ (4 screws) to securely fasten the wall-mount bracket.

* When there are caps in the 4 holes on the back of the LCD color TV, remove these ahead of time.

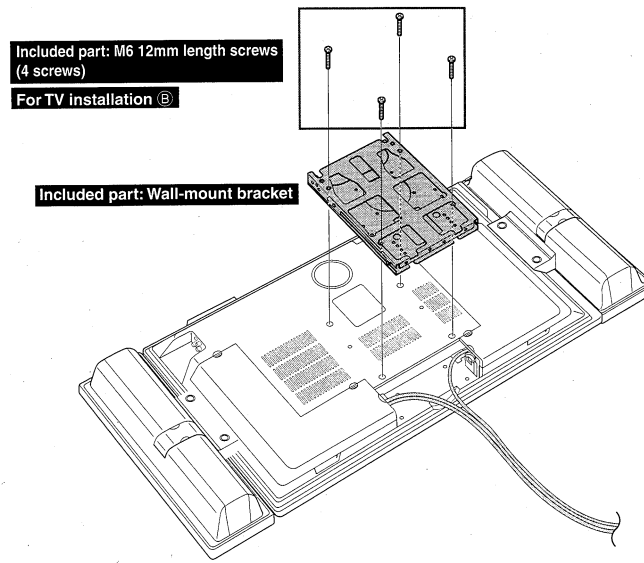

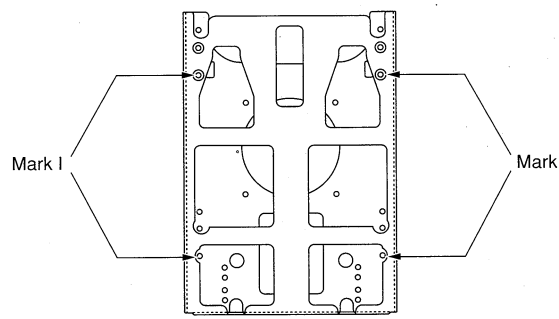

Installing the wall-mount bracket (For Model 30 inch Separate Type)

Use the following procedures to install the Model 30 inch LCD color TV (LC-30AD1*(2), LC-30HV2/4, LC-30HV6, LC-30AA1). The explanation is given using LC-30HV4 as an example, but the installation procedure is also the same for LC-30AD1*(2), LC-30HV2, LC-30HV6, LC-30AA1.

*(2) Models for which the destination market is other than Japan.

Caution

- When installing the wall-mount bracket to the LCD color TV, place the LCD color TV face down on a soft cloth or cushion.

1 Remove the terminal cover on the back of the LCD color TV.

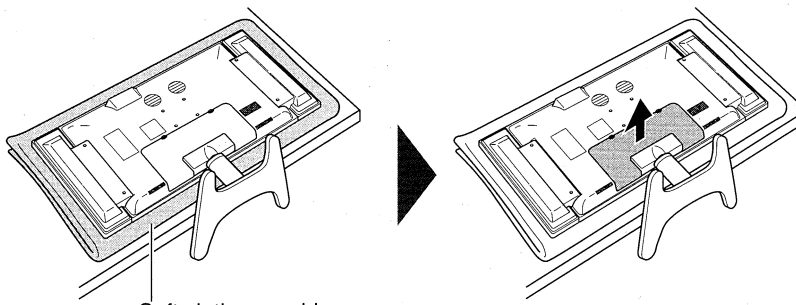

2 Remove the table stand.

Remove the screws (6 screws) fastening the table stand, and then remove the table stand. (Remove after pulling in the direction shown by the arrow.)
The removed screws (6 screws) are used in Step 3 (Page 22).

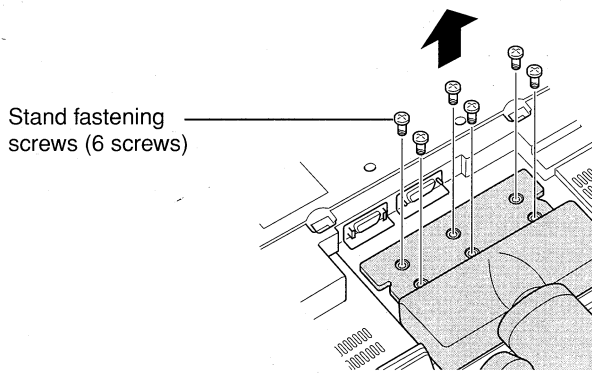

Installing the wall-mount bracket (For Model 30 inch Separate Type) (Continued)

Caution

- When installing the wall-mount bracket, use the attachment that matches the model of LCD color TV that was purchased.

Attachment HV (41 mm thick)	LC-30HV2/4, LC-30HV6, LC-30AA1, LC-30AD1*(2)

*(2) Models for which the destination market is other than Japan.

3

Install the attachment bracket.

Use the 6 screws removed in Step 2 (Page 21) to attach the attachment bracket.

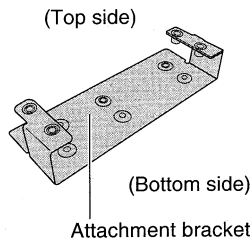

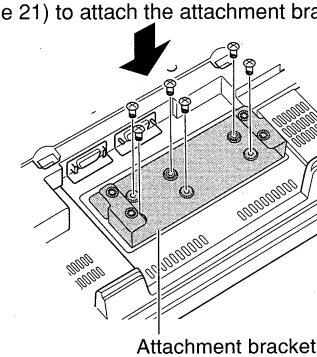

4

Perform the cable work.

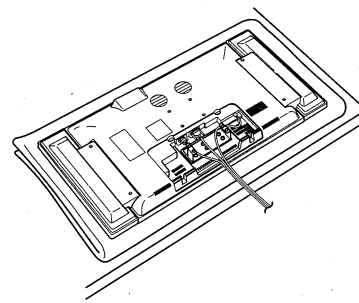

5

Installing the wall-mount bracket

1. Remove the 4 screws installed in the back of the unit and align the screw holes of the wall-mount bracket (Mark B: 4 locations) with the locations from which the screws were removed. Use the 4 removed screws to fasten the wall-mount bracket.
2. Align the wall-mount bracket screw holes (Marked "D" when using the attachment bracket HV: 4 locations) with the attachment bracket screws (4 locations) and fasten securely using the 4 included attachment installation screws (M4 length: 12mm).

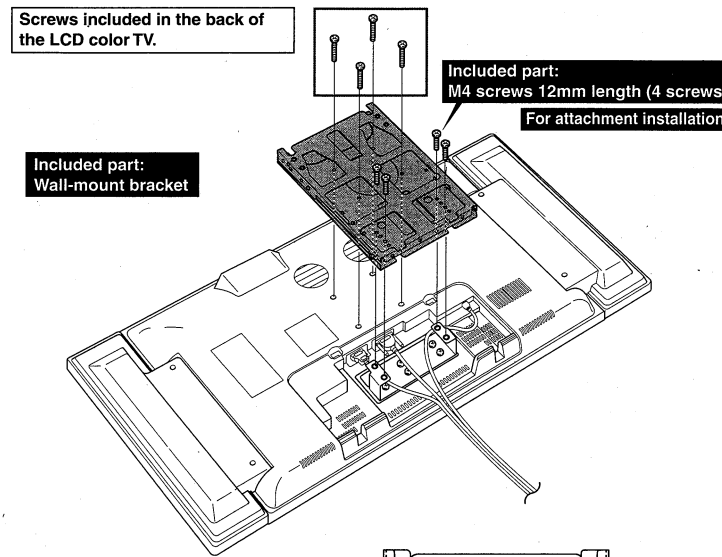
Screws included in the back of the LCD color TV.
Included part: M4 screws 12mm length (4 screws)
For attachment installation
Included part: Wall-mount bracket

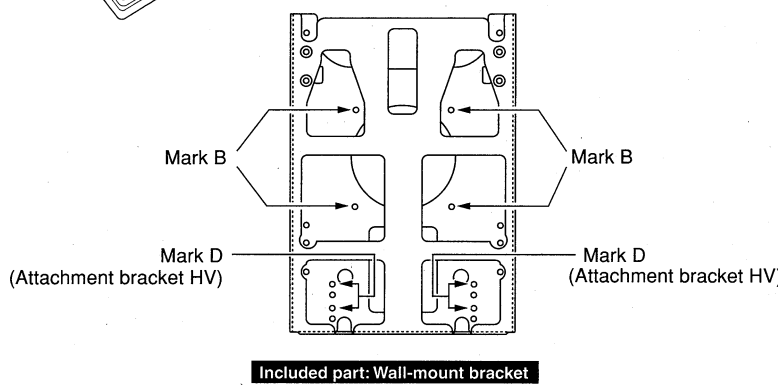

Installing the wall-mount bracket (For Model 30 inch Integrated Type)

Use the following procedures to install the Model 30 inch LCD color TV (LC-30AD1*(1), LC-30AD2, LC-30BV5, LC-30BV3, LC-30HV3). The explanation is given using LC-30BV5 as an example, but the installation procedure is also the same for LC-30AD1*(1), LC-30AD2, LC-30BV3, LC-30HV3.

*(1) Models for which the destination market is Japan.

Caution

- When installing the wall-mount bracket to the LCD color TV, place the LCD color TV face down on a soft cloth or cushion.

1 Remove the terminal covers on the back of the LCD color TV.

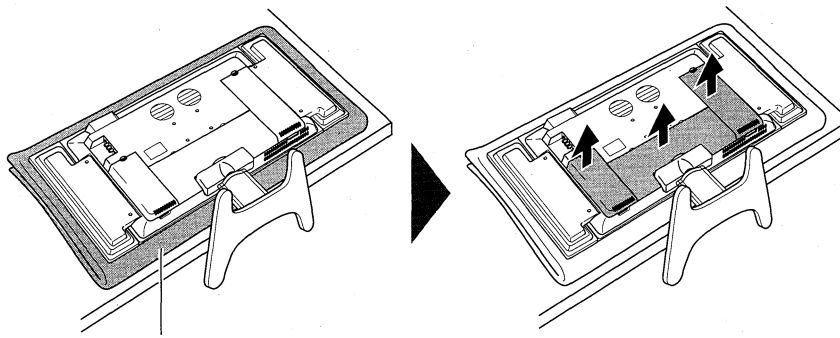

Soft cloth or cushion.

2 Remove the table stand.

Remove the screws (6 screws) fastening the table stand, and then remove the table stand. (Remove after pulling in the direction shown by the arrow.)
The removed screws (6 screws) are used in Step 3 (Page 25).

Stand fastening screws (6 screws)

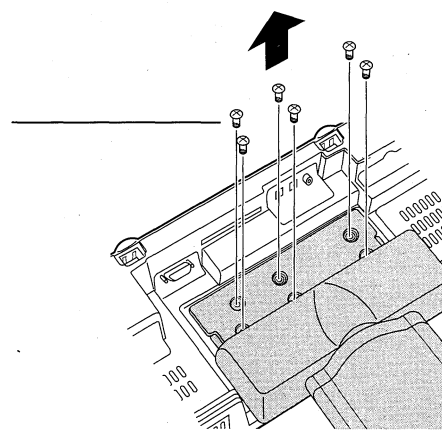

Installing the wall-mount bracket (For Model 30 inch Integrated Type) (Continued)

Caution

- When installing the wall-mount bracket, use the attachment that matches the model of LCD color TV that was purchased.

Attachment BV (51 mm thick)	LC-30AD1*(1), LC-30AD2, LC-30BV5, LC-30BV3
Attachment HV (41 mm thick)	LC-30HV3

*(1) Models for which the destination market is Japan.

3 Install the attachment bracket.

Use the 6 screws removed in Step 2 (Page 24) to attach the attachment bracket.

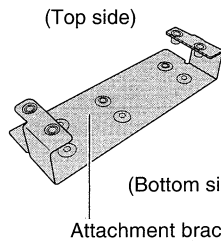

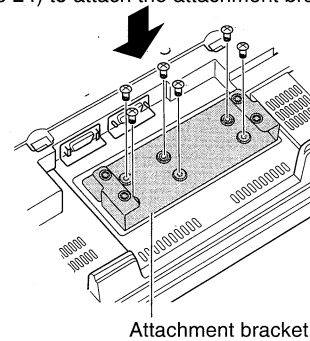

4 Perform the cable work.

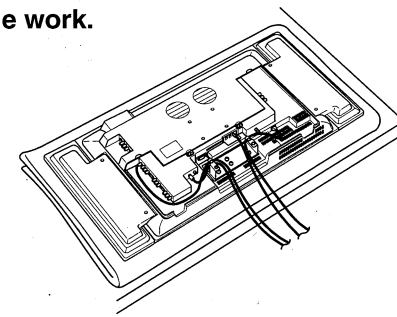

5 Install the side terminal covers.

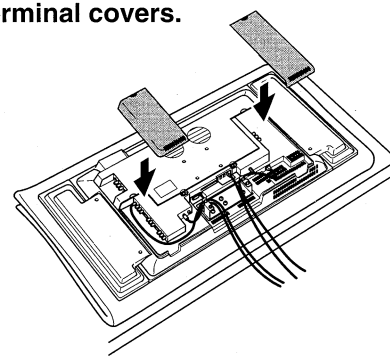

6

Installing the wall-mount bracket

1. Remove the 4 screws installed in the back of the unit and align the screw holes of the wall-mount bracket (Mark B: 4 locations) with the locations from which the screws were removed. Use the 4 removed screws to fasten the wall-mount bracket.
2. Align the wall-mount bracket unit screw holes (Marked "C" when using the attachment bracket BV: 4 locations, marked "D" when using the attachment bracket HV: 4 locations) with the attachment bracket screws (4 locations) and fasten securely using the 4 included attachment installation screws (M4 length: 12mm).

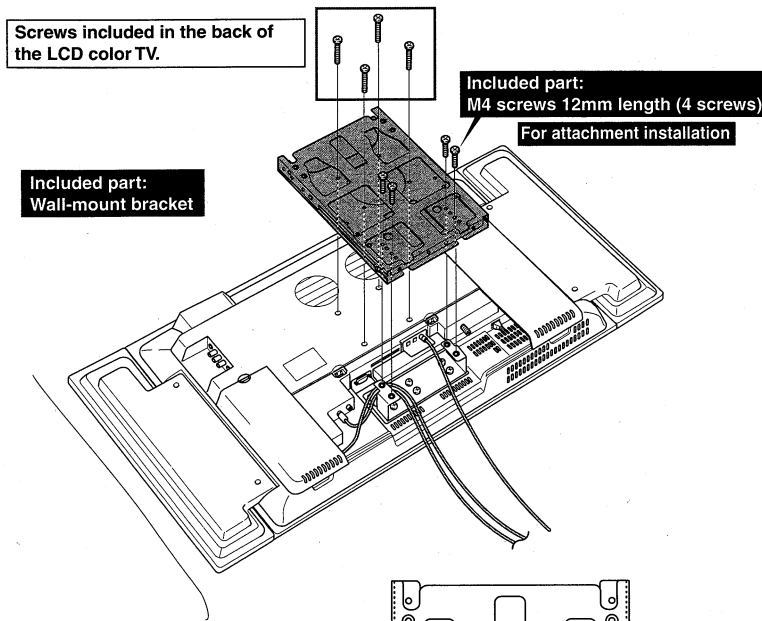
Screws included in the back of the LCD color TV.
Included part: M4 screws 12mm length (4 screws)
For attachment installation
Included part: Wall-mount bracket

- When using attachment bracket BV, align it with Mark C.
- When using attachment bracket HV, align it with Mark D.

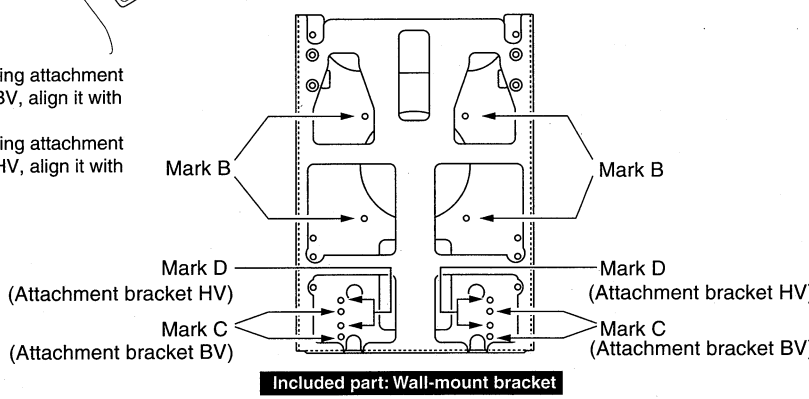

Installing the LCD color TV on the wall

Caution

- Be sure to use 2 people when installing the LCD color TV to the based bracket.
- Be sure to perform Steps 1 and 2 below. Only performing Step 1 could result in the display falling and injuring someone.

ENGLISH

1 Install the wall-mount bracket attached to the LCD color TV to the based bracket.

Hang the square holes of the wall-mount bracket on the hooks (page 4) of the based bracket.

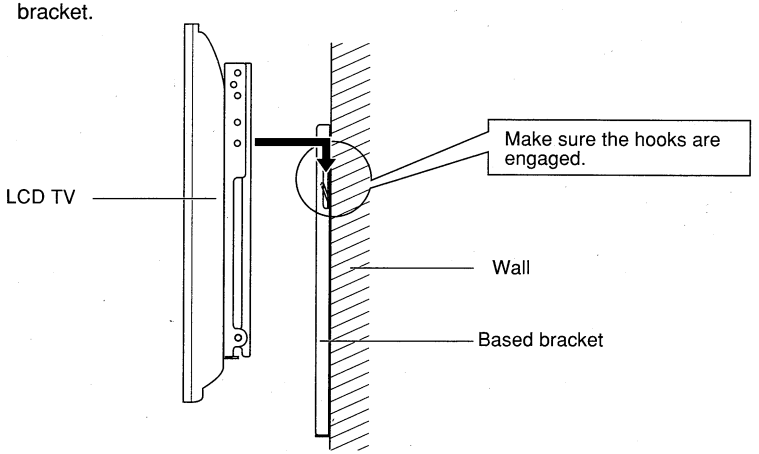

2 Tighten the wall-mount bracket and based bracket screws. (Be sure to do this.)

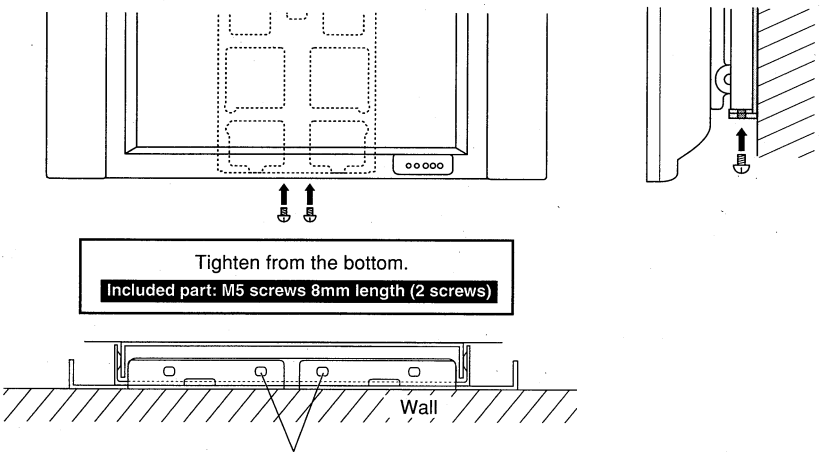

These holes are used for LC-45GD1, LC-37GD1 and LC-32GD1.

● 製品についてのお問い合わせは・・

お客様相談センター	東日本相談室 TEL 043 - 297 - 4649 FAX 043 - 299 - 8280
	西日本相談室 TEL 06 - 6621 - 4649 FAX 06 - 6792 - 5993

《受付時間》 月曜～土曜：午前9時～午後6時 日曜・祝日：午前10時～午後5時 （年末年始を除く）

● 修理のご相談は・・ 28ページ記載の『お客様ご相談窓口のご案内』をご参照ください。

● シャープホームページ http://www.sharp.co.jp/

シャープ株式会社

本 社 〒545-8522 大阪市阿倍野区長池町22番22号

AVシステム事業本部 〒329-2193 栃木県矢板市早川町174番

SHARP CORPORATION

★この取扱説明書は再生紙を使用しています。

* This Operation Manual is made from recycled paper.
* Ce mode d'emploi est fabriqué à partir de papier recyclé.
* Diese Bedienungsanleitung ist aus Recyclingpapier hergestellt.
* Este manual de manejo se imprimió en papel reciclado.

★本使用说明书是使用再生纸制成。

日本印刷
Printed in Japan
Imprimé au Japon
Gedrukt in Japan
Improso en Japón
在日本印刷

PRINTED WITH SOY INK この印刷物は環境に配慮した植物性大豆油インキを使用しています。

9HKAN-37-210△
04E. I/K